


RPA Setup Instructions

RPA interface connector
plugs into any controller
25-pin motor drive socket,
except axis one on the
MC1100e

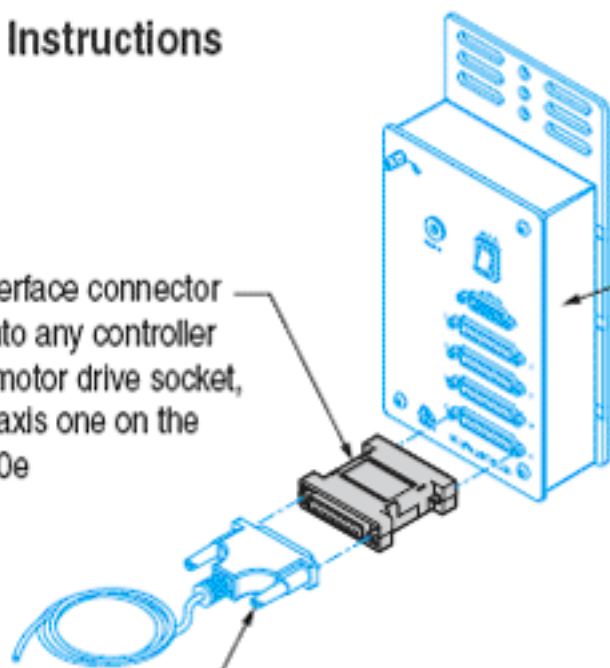

Controller
sold separately

Motor drive
25-pin connector